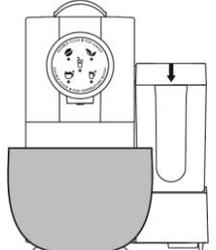
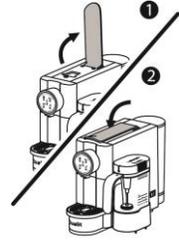
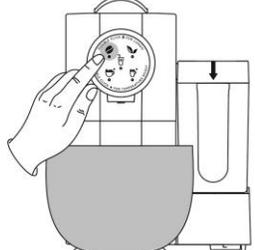
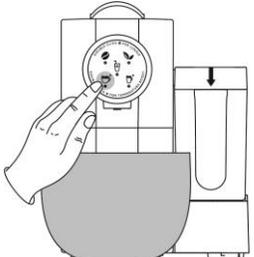
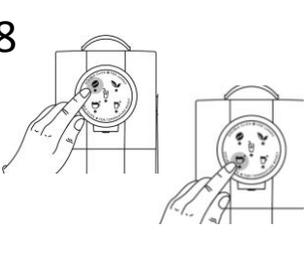
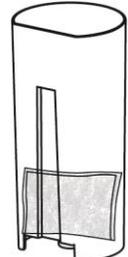


Kilrock Espresso & Coffee Machine Descaler Instruction Manual For Café Cino (CPD3M)

IMPORTANT NOTICE: PRODUCT FAILURE DUE TO THE BUILD UP OF LIMESCALE IS NOT COVERED BY GUARANTEE. Dualit recommends descaling at least once a month, in a well-ventilated area, to prevent limescale build up in the machine. The descale cycle will take approximately 45 minutes to complete. To prolong the life of your Coffee Machine and ensure it continues to produce consistent quality coffee, Dualit recommends the use of an OSCAR Bag water softener. For more information, visit our website www.dualit.com/accessories or contact our Customer Services on 01293 652500 option 1.

				
<p>With Coffee Machine turned off; remove Water Tank and pour in the full 150ml bottle of Kilrock Espresso & Coffee Machine Descaler, followed by water to fill tank to MAX mark. Replace Water Tank on the machine.</p>	<p>Plug Coffee Machine in and switch on. Remove Drip Tray and place an 800ml heat resistant container under the Nozzle. Dualit recommend a minimum container depth of 8cm to reduce splashing.</p>	<p>TIP: Lift and lower the Lever to ensure there is no capsule in the machine.</p>	<p>Enter the Descal Mode by pressing and holding the Coffee and Tea Buttons for 5 seconds. The buttons will now flash alternately.</p>	<p>Press the Coffee or Tea Button to begin descaling from the Nozzle. Once 500ml of water has been dispensed, it will automatically stop. Caution: Be aware of splashing when dispensing hot water. May be harmful during descale.</p>
				
<p>Press the Cappuccino or Latte Button to begin descaling from the Steam Wand. Once 200ml has been dispensed into the Milk Container, the machine will automatically stop. Caution: Hot water.</p>	<p>Empty your container and empty and rinse the Milk Container. Wait 10 minutes for descaling to take effect prior to step 8.</p>	<p>Rinse the Water Tank and refill with fresh water, repeating steps 5-6 two more times, without the 10 minute break. Flushing through two full tanks of fresh water removes traces of the descaling solution. Caution: Hot water.</p>	<p>Place an OSCAR Bag into the Water Tank to soften your water and reduce limescale build-up. Never allow OSCAR Bag to come into contact with descale solution. For more information or to buy your OSCAR Bag visit: www.dualit.com/accessories</p>	<p>Refill the Water Tank with fresh water and replace the Drip Tray back into the machine. Press and hold the Coffee and Tea Buttons for 5 seconds to return to the usual function. If machine is turned off in Descal Mode, it will stay in this mode when switched back on. Descal is now complete. You are now ready to make a coffee or unplug the Coffee Machine and follow the Cleaning instructions in your manual.</p>

ACTIVE INGREDIENTS: Contains amidosulphonic acid and corrosion inhibitor. See additional notes and instructions on main box. KILROCK PRODUCTS LTD. Unit 1b Alma Road Industrial Estate, Chesham, Bucks, HP5 3HB