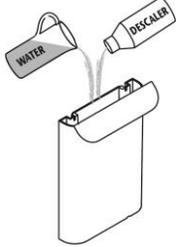
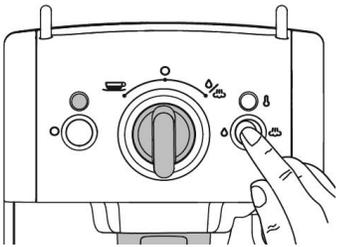
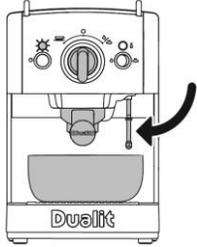
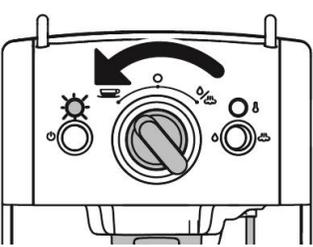
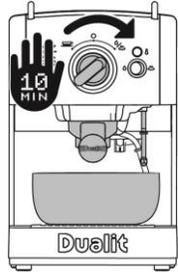
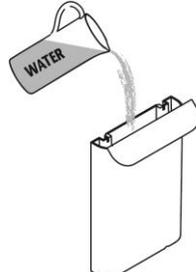
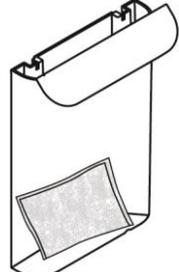
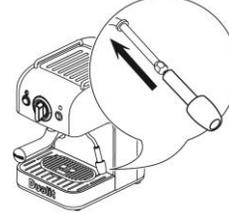


# Kilrock Espresso & Coffee Machine Descaler Instruction Manual For Espresso/Coffee Machine (DCM1/DCM2/DCM2X)

**IMPORTANT NOTICE: PRODUCT FAILURE DUE TO THE BUILD UP OF LIMESCALE IS NOT COVERED BY GUARANTEE.** Dualit recommends descaling at least once a month, in a well-ventilated area, to prevent limescale build up in the machine. The descale cycle will take approximately 45 minutes to complete. To prolong the life of your Coffee Machine and ensure it continues to produce consistent quality coffee, Dualit recommends the use of an OSCAR Bag water softener. For more information, visit our website [www.dualit.com/accessories](http://www.dualit.com/accessories) or contact our Customer Services on 01293 652500 option 1.

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 
<p>With Coffee Machine turned off; remove Water Tank and pour in the full 150ml bottle of Kilrock Espresso &amp; Coffee Machine Descaler, followed by water to fill tank to MAX mark.</p>	<p>Replace Water Tank on the machine, plug in and turn on. Ensure the Steam/Water Selector switch is set to Water. <b>Warning: Keep in this setting throughout, never on Steam mode. Risk of chemical inhalation.</b></p>	<p>Place a 1.5L heat resistant container on the Drip Tray underneath the Filter Holder, remove the Froth Nozzle from the Steam Wand and aim into the container. Dualit recommend a minimum container depth of 8cm to reduce splashing. <b>Caution: Do not remove the Drip Tray.</b></p>	<p>Turn the Control Knob to Coffee for approximately 45 seconds to run through a quarter of water in the tank. Empty your container before step 5. <b>Caution: Hot water.</b></p>
<p>5</p> 	<p>6</p> 	<p>7</p> 	<p>8</p> 
<p>Turn the Control Knob to the Steam/Water position for approximately 45 seconds until the water level has dropped to half a tank. <b>Caution: Be aware of splashing outside container when dispensing hot water. May be harmful during descale.</b> Wait 10 minutes for descaling to take effect. Then repeat steps 4 &amp; 5, to reach the minimum water level in the Water Tank.</p>	<p>Empty your container, rinse and refill the Water Tank with fresh water. Repeat steps 4 &amp; 5 twice, without the 10 minute break. <b>Flushing through two full tanks of fresh water removes traces of the descaling solution. Caution: Hot water.</b></p>	<p>Place an OSCAR Bag into the Water Tank to soften your water and reduce limescale build-up. <b>Never allow OSCAR Bag to come into contact with descale solution.</b> For more information or to buy your OSCAR Bag visit: <a href="http://www.dualit.com/accessories">www.dualit.com/accessories</a></p>	<p>Refill the Water Tank with fresh water, replace the Froth Nozzle back onto the Steam Wand. Descale is now complete. You are now ready to make a coffee or unplug the Coffee Machine and follow the Cleaning – Monthly instructions in your manual.</p>

ACTIVE INGREDIENTS: Contains amidosulphonic acid and corrosion inhibitor. See additional notes and instructions on main box. KILROCK PRODUCTS LTD. Unit 1b Alma Road Industrial Estate, Chesham, Bucks, HP5 3HB